



The Power of Reliability

ICT DISTRIBUTION SERIES 2

48V BROADBAND MODEL
WITH REMOTE POWER CONTROL

INSTRUCTION MANUAL



ICT180S-12BRC - FOR POSITIVE GROUND SYSTEMS
ICT180S-12BRCP - FOR NEGATIVE GROUND SYSTEMS

INNOVATIVE CIRCUIT TECHNOLOGY LTD.

855-313-478

TABLE OF CONTENTS

Warnings	Page 2
Product Description	Page 3
Installation	Page 4
LCD/Select Button Operation	Page 7
Web–Based Configuration Utility	Page 9
Status & Control	Page 10
Device Setup	Page 11
Output Setup	Page 13
Network Setup	Page 16
E–mail Setup	Page 18
Alarm Setup	Page 19
User Setup	Page 21
Maintenance	Page 22
Mobile Web App	Page 23
Password Reset	Page 24
Router Configuration	Page 24
Text Message Alarm Notifications	Page 27
Troubleshooting	Page 28
Product Specifications	Page 29
Limited Warranty	Page 30



WARNING

Risk of serious personal injury or damage to equipment and property! Always observe the following:

- ▶ Use an appropriately rated over–current protection device in line with the main battery connection to the Distribution Panel input to protect the high current input wiring
- ▶ Use an appropriately rated disconnect switch or circuit breaker in line with the Distribution Panel input to enable installation and service with the battery or power source disconnected
- ▶ Internal load disconnect relays may close unexpectedly! Always disconnect main power source before installing or removing fuses, or connecting or disconnecting wiring
- ▶ Use wire and connectors rated for the maximum load current and size of fuse or circuit breaker
- ▶ Carefully observe wiring polarity when making input and output connections
- ▶ Securely tighten all connections and insert fuses fully
- ▶ No internal user serviceable parts. Refer all product service to an authorized ICT Ltd. service facility



CAUTION

Risk of personal injury or damage to equipment! Always observe the following:

- ▶ Fuses may be HOT to touch. Disconnect power and allow to cool before removing or replacing
- ▶ Wiring terminals may be HOT to touch. Disconnect power and allow to cool before disconnecting load wires
- ▶ Install in a protected environment, keep sources of moisture away from unit

NOTE

Due to the breaker/fuse detection circuitry internal to the distribution panel, it may be possible to measure a voltage on the output terminal(s) even if that output's breaker or fuse is open (with no load connected). This is normal operation. The detection circuitry is a high–impedance circuit, and while a voltage may be present on the output terminal, it is purely a signal voltage and does not support loading. Any load device connected to the output will immediately pull this voltage to zero volts.

PRODUCT DESCRIPTION

The **ICT180S-12BRC** is designed for -48VDC (Positive Ground) applications.

The **ICT180S-12BRCP** is designed for +48VDC (Negative Ground) applications.

The ICT Broadband Distribution Panel with Remote Power Control provides 12 output positions that are individually protected by GMT type fuses that are rated up to 15A each. These fuses are located on the front of the panel for easy monitoring and replacement. Each BAT (battery) output terminal point is connected through a fuse to a BAT internal bus. All RTN (return) output terminal points are connected to a RTN internal bus.

There are five alarm inputs on the back of the panel for connecting external Dry Contact sensors for site monitoring and reporting of alarms such as door, water, and smoke detectors.

System voltage, system current, output currents, fuse status, and alarm input status can be monitored onsite through the LCD graphics display. Fuse status is also displayed by an LED indicator located over each fuse. Form "C" alarm contacts (C/NO/NC) are provided on the back of the panel which can be connected to an external alarm circuit for monitoring alarms generated by the panel.

Remote monitoring is available through the integrated security protected Ethernet communications port on the back of the panel. The panel has a built-in web server with an embedded web-based GUI that can be accessed using any standard commercial web browser such as Internet Explorer. The web server not only displays panel information, it can also be set up to send an alarm to user-defined email accounts in the event a fault occurs. The web server can also be used for data logging of up to 30 days of time stamped event information. All these features are packaged in a 1RU enclosure to save valuable rack space and fit standard 19" equipment racks. The rack mounting position is adjustable.

DC outputs can be turned on and off remotely, allowing connected loads to be power-cycled through the Ethernet connection.

FRONT PANEL

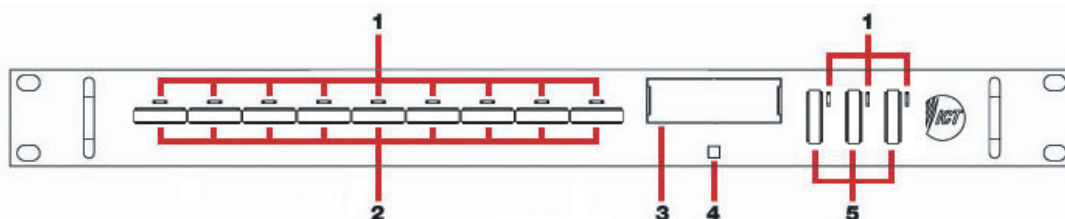


Figure 1.

1. FUSE STATUS LEDs: Turns on when a fuse is blown.
2. GMT FUSES: Location of the GMT fuses rated up to 15A.
3. LCD: Displays system voltage, system current, output current and fuse status for each of the 12 output positions.
4. OUTPUT SELECT BUTTON: For switching between LCD screens, and resetting network, web server and password settings to original factory default values.
5. GMT FUSES: Location of the GMT fuses rated up to 15A.

BACK PANEL

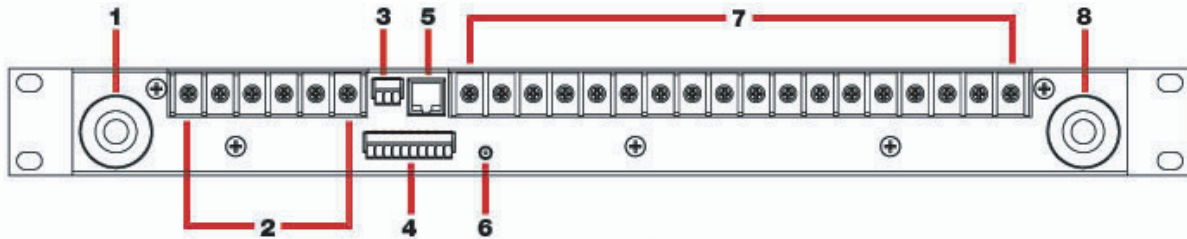


Figure 2.

1. INPUT STUD: For DC power source connection up to 180A peak and 150A continuous.
2. OUTPUT TERMINAL BLOCK 10 – 12: For DC load connections up to 15A each pair.
3. ALARM FORM “C” CONTACTS: For external alarm circuit to monitor alarms generated by the panel.
4. ALARM SENSOR INPUTS: Inputs for external Dry Contact sensors.
5. LAN PORT: For remote monitoring via TCP/IP network.
6. CHASSIS GROUND STUD: For Earth ground connection.
7. OUTPUT TERMINAL BLOCK 1 – 9: For DC load connections up to 15A each pair.
8. INPUT STUD: For DC power source connection up to 180A peak and 150A continuous.

INSTALLATION

1. Inspect panel and accessories to make sure everything is complete and in good condition.
2. For rack set up, install panel on the rack using appropriate size screws and star washers on all four mounting holes. If equipment rack is not electrically connected to Earth ground, connect a ground cable from the ground stud on the back of the panel to a known Earth ground point. Otherwise, the four mounting screws and washers may be sufficient for earth ground connection.

OR

For non-rack set up, connect a ground cable from the ground stud on the back of the panel to a known Earth ground point.

3. Remove the plastic shield(s) covering the output terminal block(s) located on the back of the panel.

For the **ICT180-12BRC** (Positive Ground):

Connect the RTN (+) of the load to the RTN terminal point and the BAT (-) of the load to the BAT terminal point.

For the **ICT180-12BRCP** (Negative Ground):

Connect the positive of the load to the positive terminal point (labeled “+”) and the negative of the load to the negative terminal point (labeled “-”).

4. Install fuse on the front of the panel for each output terminal block. The fuse number on the front of the panel matches the output terminal block number on the back of the panel. Consult your local electrical codes for wire ampacity and fuse sizing. Typically, fuses and wiring are derated to 80% of their rating (e.g. 12 Amps maximum for a 15 Amp fuse).

5. Remove the plastic caps covering the input insulated studs.

For the **ICT180-12BRC** (Positive Ground):

Connect the RTN (+) of the power source to the RTN insulated stud and the BAT (-) of the power source to the BAT insulated stud.

For the **ICT180-12BRCP** (Negative Ground):

Connect the positive of the power source to the positive insulated stud (labeled "+") and the negative of the power source to the negative insulated stud (labeled "-").

6. Re-install plastic shield(s) to the output terminal block(s) and plastic caps to the input studs.

7. For remote monitoring and power control, connect your network interface to the Ethernet port on the back of the panel. The recommended cable for Ethernet connection is Cat5e UTP network cable.

8. The Alarm Form "C" Contacts on the back of the panel can be connected to an external alarm circuit to monitor alarms generated by the panel. Depending on the alarm circuit (refer to table 2), connect it between normally open (NO) and common (C), between normally close (NC) and common (C), or both. The built-in web server controls this alarm. The alarm connector can be unplugged from the panel for easy installation.

9. For monitoring external Dry Contact sensors, connect each sensor between an Alarm Input (1 – 5) and common (C) on the alarm input connector. The alarm input connector can be unplugged from the panel for easy installation. Refer to table 3 for the alarm input connector pin-out.

10. Power up the distribution panel, and check for proper operation of the connected load(s), fuse status LEDs, LCD, form "C" alarm (if using) and Ethernet communications (if connected).

LED	FUSE STATUS
ON	Blown
OFF	Good

Table 1: Fuse Status LED

NC/C PINS	NO/C PINS	CONDITION
Open	Closed	Fuse Alarm <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • One or more blown fuse
		System Under – Voltage Alarm <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • System Voltage is below the set value
		System Over – Voltage Alarm <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • System voltage is above the set value
		System Over – Current Alarm <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • System current is above the set value
		Alarm Input #1 – #5 <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • Digital Alarm is triggered
		Output Over – Current Alarm #1 – #12 <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • Output Current is above the set value
		Output Under – Current Alarm #1 – #12 <ul style="list-style-type: none"> • Activate Alarm Form C Contact is checked • Output Current is below the set value
		No power to unit
Closed	Open	Activate Alarm Form C Contact is checked and no fault occurred
		All Activate Alarm Form C Contact is not checked

Table 2: Form “C” Alarm

PIN	DESCRIPTION
1	Common
2	Alarm Input # 1
3	Common
4	Alarm Input # 2
5	Common
6	Alarm Input # 3
7	Common
8	Alarm Input # 4
9	Common
10	Alarm Input # 5

Table 3: Alarm Input Connector Pin–out

LCD/SELECT BUTTON OPERATION

At power up, the LCD of the panel will display the main screen. To switch between the various LCD screens, press the **Output Select** button on the front of the panel (see Figure 3 for screen order).

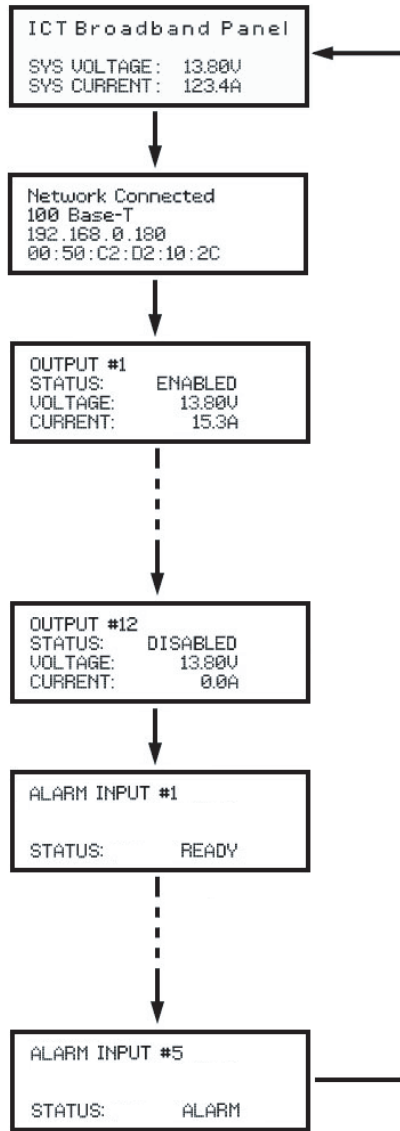


Figure 3: LCD Screens

Holding the **Output Select** button for 2 seconds at any screens will return you to the main screen.

Holding the **Output Select** button for 20 seconds at any screens will reset the password (see **Password Reset** section).

The backlight of the LCD turns off if the **Output Select** button is not pressed for 15 minutes. Press the **Output Select** button to turn the backlight back on.

MAIN SCREEN

Line 1: Displays the name of the panel, which is customizable through the web–based configuration utility.

Line 2: blank

Line 3: Displays the system voltage. Voltage display will blink if the system voltage exceeds the Under–Voltage or Over–Voltage Thresholds set on the **Alarm Setup** page.

Line 4: Displays the system current. Current display will blink if the system current exceeds the Over–Current Threshold set on the **Alarm Setup** page.

NETWORK SCREEN

Line 1: Displays the network status.

Line 2: Displays the connection type.

Line 3: Displays the IP address assigned to the panel.

Line 4: Displays the MAC address of the panel.

OUTPUT SCREEN (1 – 12)

Line 1: Displays the name of the load, which is customizable through the web–based configuration utility.

Line 2: Displays the output status. **ENABLED** for output enabled, **DISABLED** for output disabled, and **FUSE OPEN** for blown fuse.

Line 3: Displays the output voltage. Voltage display will blink if the voltage exceeds the Under–Voltage or Over–Voltage Thresholds set on the **Alarm Setup** page.

Line 4: Displays the output current for that individual output. Current display will blink if the output current exceeds the Output Over–Current or Under–Current Thresholds set on the **Output Setup** page.

ALARM INPUT SCREEN (1 – 5)

Line 1: Displays the alarm input number.

Line 2: Displays the name of the alarm input if it has been entered through the web–based configuration utility. Otherwise, this line is blank.

Line 3: blank

Line 4: Display the alarm input status. **ALARM** if the alarm input is triggered, **READY** if the alarm input is not triggered.

Note: The alarm input screens are only displayed if the alarm input has enabled (see **Alarm Setup** section in the instruction manual).

WEB-BASED CONFIGURATION UTILITY

Follow these steps to access the panel from a browser. The recommended web browsers to use with this panel are Microsoft Internet Explorer, Mozilla Firefox or Google Chrome.

1. Start your web browser.
2. Enter the IP address of the panel in the location/address field of the browser.

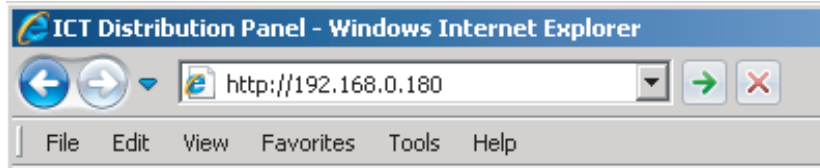


Figure 4.

If the panel is connected to a network with a DHCP server, the panel will be assigned an IP address automatically. To find the current IP address of the panel, see the **LCD Operation** section in the instruction manual. If the panel is not connected to a network with DHCP, it will use a default IP address of **192.168.0.180**.

3. Enter your user name and password. The default Administrator user name is **admin**, and there is no password by default.



Figure 5.

4. Once connected, the panel **Status & Control** page will appear in your browser window.

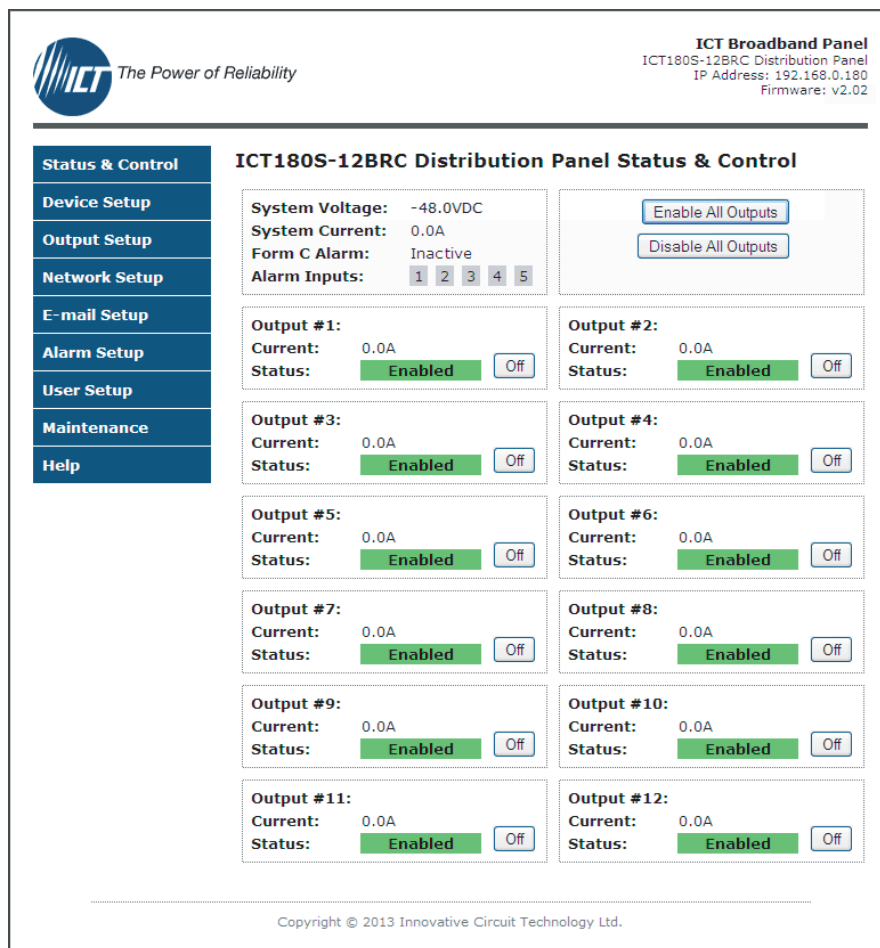


Figure 6.

STATUS & CONTROL

This page provides information on system voltage, system current, alarm status, output status, and current level by output contact (1 through 12). It also allows you to manually enable or disable DC power to the each of the output terminals.

If any alarm inputs are enabled, the status of the alarm inputs will be shown on this page. If an alarm input number is displayed in a grey box, the alarm sensor is “ready”. If an alarm input number is displayed in a red box, the alarm sensor is in an “alarm” condition.

Enable All Outputs: Pressing this button will enable DC power to all outputs. If power-on sequencing is enabled on the Device Setup page, the outputs will be enabled in sequence, instead of enabling them simultaneously.

Disable All Outputs: Pressing this button will disable DC power to all outputs.

On and Off: Pressing these buttons will enable or disable DC power to individual outputs.

DEVICE SETUP

This page allows you to configure the device settings of the panel. To save any changes to the device settings, click on **Save Settings** at the bottom of this page.

DEVICE INFO

Site Name: Allows you to assign a custom name to the panel.

Model: Displays the model number of the panel.

Hardware: Displays the hardware version of the panel.

DATE AND TIME SETTINGS

Current System Time: Displays the current date and time of the panel's onboard clock. This clock is used to timestamp the log entries in the data log. The clock can either be set manually, or it can be synchronized with a remote NTP Time Server over Ethernet.

Synchronizing the clock with a NTP Server is recommended to ensure that the date and time will still be correct after a power failure.

Synchronize with NTP Server: Checking this box will enable date and time synchronization with a NTP Server. A valid server address must also be entered in the NTP Server field.

NTP Server: The name or IP address of the NTP Server used for date and time synchronization (such as pool.ntp.org).

Time Zone: Select a time zone to convert the time received from the NTP Server to your local time.

Set Time Manually: Checking this box will allow you to manually set the panel's date and time. The date must be entered in MM/DD/YY format, and the time must be entered in HH:MM:SS format.

POWER-ON SEQUENCING / CYCLING

Sequence / Cycle Delay: Entering a time delay in this field will cause all outputs to be enabled in sequence when the **Enable All Outputs** button is pressed on the **Status & Control** page, rather than enabling all outputs simultaneously. This delay helps prevent power surges that can occur when too many devices are turned on at the same time. The time delay before each output is enabled can be set to a value between 0 and 60 seconds.

If the **Power Cycling** option is enabled for any outputs on the **Output Setup** page, this field also sets the Power Cycle time delay.

Reverse Sequence Order: If this box is checked, the outputs will be enabled in reverse sequence (Output #12 first, Output #1 last) when the **Enable All Outputs** button is pressed on the **Status & Control** page.

NETWORK WATCHDOG

Watchdog Enabled: Checking this box will enable the Network Watchdog feature. The Network Watchdog will periodically Ping up to two remote IP address to check the network connection status. If the remotes IP address stops responding, the Panel will power-cycle any outputs that have the **Power Cycling** option enabled. This feature is useful for rebooting a modem or router following a crash that has resulted in loss of IP connectivity. For the Network Watchdog to work, at least one output must have the **Power Cycle** option enabled, and a time delay must be entered in the **Sequence / Cycle Delay** field.

Primary IP Address: Enter the remote IP address you would like to monitor. This field is optional; if left blank, the Network Watchdog will instead monitor the Gateway IP address listed on the **Network Setup** page.

Secondary IP Address: An optional second remote IP address can be entered in this field. If entered, the Network Watchdog will only trigger if both the Primary and Secondary IP Addresses fail to respond.

Watchdog Timeout: Enter the time duration, in minutes, that the remote IP addresses must stop responding to Ping requests before the Network Watchdog will trigger and power-cycle outputs. The default setting is 10 minutes. The Watchdog Timeout can be changed to anything between 1 and 80 minutes. Make sure that the Watchdog Timeout value is set longer than the time it takes for your network hardware to fully start up.

DATA LOGGING

Data Logging: Allows you to enable data logging. With data logging enabled, the panel will record the system voltage, system current, output currents, fuse status, and alarm input status at a sample rate of 1 sample per minute. To view the log while data logging is enabled, click on the **Download Log button** next to the data logging dialog box. This will download the log in Comma Separated Values (CSV) format, which can be opened by most spreadsheet software applications such as Microsoft Excel. The log will hold up to 30 days of data, with oldest log entries at the top of the log file.

OUTPUT SETUP

This page allows you to configure the output settings of the panel. In the **Select an Output** to edit box, click on the output number of the output you wish to configure. To save any changes to the output settings, click on **Save Settings** at the bottom of this page.

To copy the configuration settings from one output to all of the other outputs, click on **Copy Settings to All**, and then click on **Save Settings** to save the new settings.

OUTPUT SETTINGS

Label: Allows you to assign a custom name to each individual output. The output names are displayed on the **Status & Control** page, as well as on the LCD screen.

Output State after Panel Reset: Allows you set the output state of the selected output after a power failure or a soft reset. Select one of the following options:

- “Restore Last State”: If this option is selected, the panel will remember if this output was enabled or disabled prior to the power failure or reset. The output will be restored to the same state after the panel starts up.
- “Enable Output”: If this option is selected, this output will always be enabled after the panel starts up after a power failure or reset.
- “Disable Output”: If this option is selected, this output will always be disabled after the panel starts up after a power failure or reset.

Ignore Fuse Status: If this box is checked, the panel will not monitor the status of the fuse for the selected output.

Enable Power Cycling: Checking this box will turn on power-cycling for the selected output. When Power-Cycling is enabled for an output, the output will automatically be re-enabled after a selectable period of time after it is disabled from the **Status & Control** page. Power-Cycling is useful for remotely resetting power to hardware that is needed for network connectivity to the panel.

If Power Cycling is enabled for any outputs, the **Sequence/Cycle Delay** setting must be also set on the **Device Setup** page.

If multiple outputs with Power-Cycling enabled are disabled from the **Status & Control** page at the same time, they will be re-enabled in sequence.

OUTPUT LOAD–SHEDDING

Load–Shedding: Allows you to turn on load–shedding for the selected output. Load–shedding automatically disables DC power to the output when the system voltage drops below the load–shedding threshold voltage.

The system voltage must remain below the load–shedding threshold voltage for at least 30 seconds before the output will be disabled. This is to prevent the outputs from being disabled prematurely during a power surge.

Load–Shedding Threshold: Enter the load–shedding threshold voltage for the selected output.

Load–Shedding Auto Recovery: If this box is checked, outputs that have load–shedding turned on will automatically be enabled after the system voltage rises above the load–shedding recovery voltage.

The system voltage must remain above the load–shedding recovery voltage for at least 60 seconds before the output will be enabled. If this box is unchecked, outputs will need to be manually re–enabled after load–shedding is triggered.

Auto Recovery Threshold: Enter the load–shedding recovery voltage for the selected output. The value in this field must be at least 0.50V higher than the load–shedding threshold voltage.

OUTPUT OVER–CURRENT ALARM

Over–Current Threshold: If the current on the selected output rises above the value in this field, the output over–current alarm will trigger.

The output current must remain above the over–current threshold for at least 5 seconds before the alarm will be triggered.

To disable this alarm, set the value in this field to 0 Amps.

Activate Alarm Form C Contact: If this box is checked, the Alarm Form “C” Contacts on the panel will indicate a fault condition when the over–current alarm is triggered for the selected output.

Send E–mail: If this box is checked, an e–mail alarm notification will be sent when the over–current alarm is triggered for the selected output. The e–mail settings on the **E–mail Setup** page must be configured correctly before e–mail notifications can be sent.

OUTPUT UNDER-CURRENT ALARM

Under-Current Threshold: If the current on the selected output drops below the value in this field, the output under-current alarm will trigger.

The output current must remain below the under-current threshold for at least 5 seconds before the alarm will be triggered.

To disable this alarm, set the value in this field to 0 Amps.

Activate Alarm Form C Contact: If this box is checked, the Alarm Form “C” Contacts on the panel will indicate a fault condition when the under-current alarm is triggered for the selected output.

Send E-mail: If this box is checked, an e-mail alarm notification will be sent when the under-current alarm is triggered for the selected output. The e-mail settings on the **E-mail Setup** page must be configured correctly before e-mail notifications can be sent.

NETWORK SETUP

WARNING: Changing the network settings will reboot the panel..

This page allows you to configure the network settings of the panel. To save any changes to the network settings, click on **Save Settings** at the bottom of this page and panel will reboot.

NETWORK

MAC Address: Displays the MAC address assigned to the panel. It can also be found on line 4 of the network status screen of the LCD (see **LCD/Select Button Operation**).

Enable DHCP: Turn on this setting if your network is using a DHCP server to automatically assign IP addresses (DHCP is enabled by default). To manually assign a Static IP address to the panel, uncheck the **Enable DHCP** box and then set the following settings.

IP Address: Specify a unique IP address for the panel.

Subnet Mask: Specify the mask for the subnet the panel is located on.

Gateway: Specify the IP address of the default router (gateway) used for connecting attached devices to different networks.

Primary DNS: Specify the IP address of the Primary DNS Server for your network.

Secondary DNS: Specify the IP address of the Secondary DNS Server for your network.

WEB SERVER

WARNING: Changing these ports may affect your ability to access the panel.

The web server port numbers can be changed to any port within the range 1 – 65565.

HTTP Port: Allows you to change the HTTP port number. This port is used for HTTP traffic between the panel and web browser. The default HTTP port is **80**. If you change the HTTP port to a number besides 80, you will have to append the new port number to the URL used to access the panel (e.g.

http://192.168.0.180:8000 for IP address **192.168.0.180**, port **8000**).

HTTPS Port: Allows you to change the HTTPS port number used by the panel. HTTPS (HTTP secure) is a protocol which encrypts data transferred between web browsers and servers. The default HTTPS port is **443**.

To access the panel through a secure HTTPS connection, type **https://** in front of the URL used to access the panel (e.g. **https://192.168.0.180:8888** for IP address **192.168.0.180**, HTTPS port **8888**).

UDP Port: Allows you to change the UDP port number used by the panel. This port is used when applying firmware upgrades to the panel. The default UDP port is **9393**.

SNMP

Configure these settings if you would like to use SNMP monitoring. SNMP (Simple Network Management Protocol) is the industry standard protocol for network management software. When SNMP is enabled on the panel, it allows standard SNMP management software to connect to the SNMP agent running on the panel and read real-time system information such as voltage and current. A SNMP trap can also be sent to your SNMP management software when an alarm or fault occurs.

The information available from the SNMP agent is described in a MIB (Management Information Base) file, which can be downloaded from the Help page. The unique panel MIB file must then be imported into your external SNMP management software.

Enable SNMP: Check this box to enable the SNMP agent.

SNMP Version: Sets the SNMP version (v1/v2c, v3, or All) supported by the panel SNMP agent. If All is selected, all SNMP versions will be supported simultaneously. The appropriate settings for the selected SNMP version will need to be configured.

Enable SNMP Write Access: Turning on this setting will allow you enable or disable DC power to individual outputs through SNMP. If this box is unchecked, all information available from the SNMP agent will be read-only.

SNMP Contact Information: Assign contact information, such as an operator name and phone number for the panel, which can be read via SNMP queries. (This information is optional)

SNMPv1/v2c Settings:

Read Community: Enter the community string/password here for read-only SNMP access. The default read community string is "public".

Write Community: Enter the community string/password here for read/write SNMP access. The default write community string is "write".

It is recommended to change the community strings before enabling SNMP, as the defaults are well known.

SNMPv3 Settings:

User Name: Enter the user name for SNMPv3 access.

Authentication Protocol: Select the SNMPv3 authentication protocol (None, MD5, or SHA).

Authentication Password: If an authentication protocol is selected, enter the authentication password.

Privacy Protocol: Select the SNMPv3 privacy protocol (None, or AES).

Privacy Password: If a privacy protocol is selected, enter the privacy password.

SNMP Trap Settings:

Trap Community: Enter the community string/password that is sent with all traps. Some trap receivers are able to filter on trap community.

Trap IP Addresses: Enter the IP addresses for up to two devices that will receive SNMP traps from the panel.

E-MAIL SETUP

Configure these settings if you would like to receive e-mail alarm notifications from the panel. The information for the following settings is available from your Network Administrator or Internet Service Provider (ISP).

E-MAIL

SMTP Server: The name or IP address of your SMTP server used for sending outgoing e-mail.

SMTP Server requires SSL: Check this box if your SMTP Server requires an encrypted SSL connection.

SMTP Port: The port used by your SMTP server. The standard port used by most SMTP servers is **25**.

Sender E-mail Address: Enter the e-mail address you wish to appear as the sender of the e-mail notifications.

Recipient E-mail Addresses: Enter the e-mail addresses you wish to receive the e-mail notifications. If multiple e-mail addresses are entered, use commas to separate the addresses. This field can also be used to send a text message notification to a cell phone. See the **Text Message Alarm Notifications** section for more information.

SMTP User Name: If your SMTP server requires a user name and password, enter the user name here. Leave this field blank if your SMTP server does not require authentication.

SMTP Password: If your SMTP server requires a user name and password, enter the password here. Leave this field blank if your SMTP server does not require authentication.

Minimum E-mail Interval: This setting allows you to specify how many minutes have to elapse between e-mail notifications. This setting is used to prevent your network from being flooded with alarm e-mails if your alarm thresholds are not set correctly. The default setting is 1 minute. This setting can be changed to anything between 0 and 60 minutes.

GENERAL E-MAIL NOTIFICATIONS

The Distribution Panel restarts: Check this box to receive an e-mail notification when the panel restarts after a power failure or a soft reset.

Load-Shedding is activated: Check this box to receive an e-mail notification when any outputs are automatically enabled or disabled by the load-shedding settings on the **Output Setup** page.

The Network Watchdog triggers: Check this box to receive an e-mail notification after the Network Watchdog triggers and the network connection has come back online.

ALARM SETUP

This page allows you to select which alarms you wish to monitor, and also allows you to enter custom thresholds for each status condition. To save any changes to the alarm settings, click on **Save Settings** at the bottom of this page.

FUSE ALARM

Activate Alarm Form C Contact: If this box is checked, the alarm form “C” contacts on the panel will indicate a fault condition when an output fuse is blown.

Send E-mail: If this box is checked, an e-mail alarm notification will be sent when an output fuse is blown. The e-mail settings on the **E-mail Setup** page must be configured correctly before e-mail notifications can be sent.

SYSTEM UNDER-VOLTAGE ALARM

Under-Voltage Threshold: If the system voltage drops below the value in this field, the system under-voltage alarm will trigger.

Under-Voltage Recovery: If the system voltage rises above the value in this field, the system under-voltage alarm will clear. The value in this field must be at least 0.50V higher than the Under-Voltage Threshold.

Activate Alarm Form C Contact: If this box is checked, the Alarm Form “C” Contacts on the panel will indicate a fault condition when the system under-voltage alarm is triggered.

Send E-mail: If this box is checked, an e-mail alarm notification will be sent when the system under-voltage alarm is triggered. The e-mail settings on the **E-mail Setup** page must be configured correctly before e-mail notifications can be sent.

SYSTEM OVER-VOLTAGE ALARM

Over-Voltage Threshold: If the system voltage rises above the value in this field, the system over-voltage alarm will trigger.

Activate Alarm Form C Contact: If this box is checked, the alarm form “C” contacts on the panel will indicate a fault condition when the system over-voltage alarm is triggered.

Send E-mail: If this box is checked, an e-mail alarm notification will be sent when the system over-voltage alarm is triggered. The e-mail settings on the **E-mail Setup** page must be configured correctly before e-mail notifications can be sent.

SYSTEM OVER–CURRENT ALARM

Over–Current Threshold: If the total system current rises above the value in this field, the system over–current alarm will trigger.

The system current must remain above the over–current threshold for at least 5 seconds before the alarm will be triggered.

Activate Alarm Form C Contact: If this box is checked, the alarm form “C” contacts on the panel will indicate a fault condition when the system over–current alarm is triggered.

Send E–mail: If this box is checked, an e–mail alarm notification will be sent when the system over–current alarm is triggered. The e–mail settings on the **E–mail Setup** page must be configured correctly before e–mail notifications can be sent.

ALARM INPUT #1 – #5

Alarm Name: Allows you to assign a custom name to each individual alarm input.

Contact Type: Allows you to configure each individual alarm input as a “Normally Open” contact, a “Normally Closed” contact, or as “Not Used”.

If the alarm input is configured as “Not Used”, it will be disabled and will not appear on the **Status & Control** page or on the LCD screen.

Activate Alarm Form C Contact: If this box is checked, the alarm form “C” contacts on the panel will indicate a fault condition when this alarm input triggers.

Send E–mail: If this box is checked, an e–mail alarm notification will be sent when this alarm input triggers. The e–mail settings on the **E–mail Setup** page must be configured correctly before e–mail notifications can be sent.

USER SETUP

This page allows you to configure passwords for accessing the panel. To save any password changes, click on **Save Settings** at the bottom of this page.

The Administrator account has no password assigned to it by default. For improved security, it is recommended that you assign a password to the account.

WARNING: Please record your password. If the Administrator password is lost, the panel must be reset to return the password to the default setting. See the Password Reset section for more information.

Select a User to Edit: There are two user accounts with access to the panel:

Administrator (user name: **admin**) – This account has full access to the panel.

Standard User (user name: **user**) – This account has view-only access to the panel. This account cannot be used to enable/disable outputs, or change settings.

New Password: Allows you to change the password for the selected user.

Confirm New Password: When changing a password, you must re-enter the new password here.

Administrator Password: Enter the current Administrator password here to confirm changes.

MAINTENANCE

This page allows you to reset the panel, restore the panel to factory default settings, and send test e-mail to verify that functionality.

RESET DISTRIBUTION PANEL

Pressing the **Reset** button will restart the Distribution Panel. Output states will be set according to the “Output State after Panel Reset” settings on the **Network Setup** page. All other settings are maintained during the reset.

RESTORE FACTORY DEFAULT SETTINGS

Pressing the **Restore** button will restore **ALL** settings to the original factory default values, including the passwords. If you only want to restore the network settings and passwords, see the **Password Reset** section.

SEND TEST E-MAIL

Pressing the **Send Test E-mail** button will send test e-mail to the specified recipient using the e-mail settings on the **Network Setup** page.

PING DIAGNOSTICS TOOL

This tool can be used to verify connectivity to any network device. To use the tool, Enter the hostname or IP address of the target device, then click **Ping**.

MOBILE WEB APP

A mobile version of the **Status & Control** page is available which is optimized for smartphone web browsers.

To access the Mobile Web App, type the address of the panel in the location/address field of the browser on your smartphone, followed by **/m** (e.g. **https://192.168.0.180/m**). You will be prompted for your user name and password.

For increased security when accessing the panel over the Internet, it is highly recommended that you connect to the Mobile Web App using a HTTPS connection, or use a Virtual Private Network (VPN) connection.

ICT Broadband Panel		
System Voltage:		-48.0VDC
System Current:		0.0A
Alarm Inputs:		1 2 3 4 5
Output #1 0.0A	Output #2 0.0A	Output #3 0.0A
Output #4 0.0A	Output #5 0.0A	Output #6 0.0A
Output #7 0.0A	Output #8 0.0A	Output #9 0.0A
Output #10 0.0A	Output #11 0.0A	Output #12 0.0A
Enable All Outputs		Disable All Outputs

Figure 7: Mobile Web App

The Mobile Web App provides information on system voltage, system current, alarm input status, output status, and current level by output contact (1 through 12).

If you are logged in using the Administrator account, you can enable or disable DC power to individual outputs by tapping on the output cells.

Tap the **Enable All Outputs** button to enable DC power to all outputs. If power-on sequencing is enabled on the Device Setup page, the outputs will be enabled in sequence, instead of enabling them simultaneously.

Tap the **Disable All Outputs** button to disable DC power to all outputs.

PASSWORD RESET

Resetting the password resets the Administrator password, network and web server settings to the original factory default values. The Standard User password is not affected. To reset, do the following:

1. Press and hold the **Output Select** button on the front of the panel (approximately 20 seconds) until **Resetting** is shown on the LCD.
2. Release the button.
3. After reset is complete, press and release the **Output Select** button once to view the network status screen on the LCD. The new IP address of the panel will be displayed.

ROUTER CONFIGURATION

This section explains how to set up the panel behind a router and enable remote access to the panel over the Internet.

A router allows multiple PCs to share a single Internet connection. To enable access to the panel over the Internet, you will need to configure your router to forward incoming remote data to the local IP address of your panel.

The following steps use a Linksys WRT54G router as an example.

1. Log in to your router and go to the port forwarding screen. In the Linksys WRT54G, this is located in the **Applications and Gaming** tab. The location of port forwarding may be different on other routers (consult your router manual for instructions).
2. To configure HTTP forwarding, following these steps:
 - a. Enter a unique name in the **Application** field.
 - b. Enter the HTTP port number that the panel is using in the **Start** and **End** fields. If you are using the default panel port settings, the port number is **80**.
 - c. Select **Both** under **Protocol** (TCP and UDP).
 - d. Enter the local IP address of the panel (e.g. 192.168.0.180) in the **IP Address** field. See step 2 of **Web-based Configuration Utility** section to find the actual local IP address of your panel.
 - e. Check **Enable**, and then click on **Save Settings**.

NOTE: Many ISPs block access to port 80. If your ISP does block port 80, you will need to change the HTTP port the panel uses from 80 to something else, such as 8000. Valid port numbers are in the range of 1 – 65535. See the **Network Setup** section for instructions on how to change the panel network ports. You will also need to change the HTTP port number from 80 to something else if your local network already contains another device using port 80 such as another panel or a web server.

Wireless-G Broadband Router WRT54G

Applications & Gaming

Setup | Wireless | Security | Access Restrictions | Applications & Gaming | Administration | Status

Port Range Forward | Port Triggering | DMZ | QoS

Port Range Forward

Port Range					
Application	Start	End	Protocol	IP Address	Enable
http	80	to 80	Both	192.168.0.180	<input checked="" type="checkbox"/>
https	443	to 443	Both	192.168.0.180	<input checked="" type="checkbox"/>
udp	9393	to 9393	Both	192.168.0.180	<input checked="" type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>
	0	to 0	Both	192.168.0.0	<input type="checkbox"/>

Port Range Forwarding : Certain applications may require to open specific ports in order for it to function correctly. Examples of these applications include servers and certain online games. When a request for a certain port comes in from the Internet, the router will route the data to the computer you specify. Due to security concerns, you may want to limit port forwarding to only those ports you are using, and uncheck the **Enable** checkbox after you are finished. **More...**

Save Settings | Cancel Changes

CISCO SYSTEMS

Figure 8.

3. To configure HTTPS forwarding, repeat steps 2a – 2e with the HTTPS port number that the panel is using. If you are using the default panel port settings, the HTTPS port number is 443.

4. To set up your router to allow remote panel firmware upgrades, repeat steps 2a – 2e with the UDP port number that the panel is using. If you are using the default panel port settings, the UDP port number is 9393. Firmware upgrades can still be applied locally if this step is skipped.

5. Before you can access the panel over the Internet, you will need to know the WAN IP address of the router, which is assigned by your ISP. With the Linksys WRT54G router, this information is available in the Status tab, listed as IP Address (see Figure 9).

NOTE: If you are using a Dynamic IP address, your WAN IP Address may change from time to time without warning, depending on your ISP. You may want to obtain a Static IP address from your ISP, which will be more convenient to use to access the panel from a remote location. A Static IP address is a fixed IP address that will not change. Alternatively, if a Static IP address is not available, you can use a Dynamic DNS service such as **Dyn** (see www.dyn.com).



Figure 9.

6. To access the panel over the Internet, type the WAN IP Address of the router in the location/address field of your browser, followed by a colon and the HTTP port number that the panel is using (e.g. **http://209.123.10.33:8000** for IP Address **209.123.10.33**, Port **8000**).

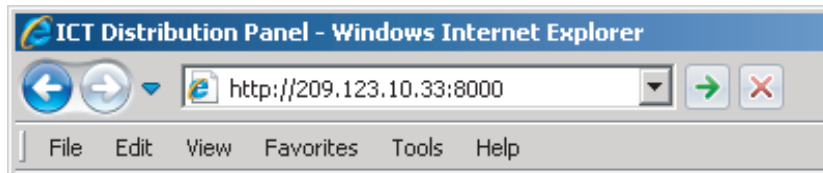


Figure 10.

TEXT MESSAGE ALARM NOTIFICATIONS

The panel can send text message alarm notifications to a cell phone by sending the alarm e-mail to an address at the mobile phone provider. On the **E-mail Setup** page, enter the address for your phone in the **Recipient E-mail Addresses** field. For example, to send a text message to an AT&T phone, enter **cellnumber@txt.att.net**, replacing **cellnumber** with your cell phone number.

Here are some address formats for other mobile phone providers:

AT&T	cellnumber@txt.att.net
Verizon	cellnumber@vtext.com
T-Mobile	cellnumber@tmomail.net
Virgin Mobile	cellnumber@vmobl.com
Nextel	cellnumber@messaging.nextel.com
Bell Mobility	cellnumber@txt.bell.ca
Rogers	cellnumber@pcs.rogers.com
Telus	cellnumber@msg.telus.com

TROUBLESHOOTING

I am unable to access the web–based configuration utility:

- ▶ Check that you are using the correct IP address to access the panel by pressing the **Output Select** button on the front of the panel to view the **Network Status** screen on the LCD. The IP address for the panel may have changed if DHCP is enabled.
- ▶ If the **Network Status** screen on the LCD shows **Network Not Connected**, check the network cable connections to the panel and the network.
- ▶ Ensure that you are using the correct type of network cable. An industry standard "crossover" cable should be used for connecting directly to a computer, and a "straight–through" cable should be used for connecting to a network.
- ▶ Ensure the network card settings on your computer are appropriate for accessing the IP address of the panel. To access a panel with the default IP address of 192.168.0.180, typical network settings for your computer are:
 - o **IP Address:** 192.168.0.100
 - o **Subnet Mask:** 255.255.255.0
 - o **Gateway:** 192.168.0.1
- ▶ If the HTTP port of the panel has been changed, you must append the port number to the URL used to access the panel. See the **Password Reset** section for instructions on how to reset the port number to the default setting.
- ▶ If your network switch allows you to manually configure port speed and duplex settings, turn on "Auto–negotiation" on the switch port that the panel is connected to.

I forgot my password:

- ▶ See the **Password Reset** section for instructions on how to reset the password.

I am not receiving e–mails from the panel:

- ▶ On the **Network Setup** page, ensure that the **SMTP Server** field is entered correctly. The **SMTP Port** should be set to **25** for most servers.
- ▶ If your SMTP server requires SSL encryption, ensure that the **SMTP Server requires SSL** checkbox is checked. Otherwise, this box must be left unchecked.
- ▶ If your SMTP server requires authentication, ensure that the **SMTP User Name** and **SMTP Password** fields are entered correctly. If no authentication is required, leave these fields blank.
- ▶ Verify your e–mail settings by going to the **Maintenance** page and clicking on the **Send Test E–mail** button to send a test e–mail. The **Send Test E–mail** page will display an error message if the panel unable to send the e–mail.
- ▶ On the setup pages, ensure that the **Send E–mail** checkboxes are checked for alarm conditions you wish to receive notifications for.

PRODUCT SPECIFICATIONS

Operating Voltage: ICT180–12BRC: –10 to –60VDC
ICT180–12BRCP: +10 to +60VDC

Panel Capacity: 150A (Continuous)
180A (Peak)

Fuse Capacity: 15A Maximum GMT x 12

Note 1: Ensure that the load total connected to the fused outputs does not exceed the panel capacity rating.

Note 2: Most fuses should be continuously operated at no more than 80% of their nominal current rating.
Consult the fuse manufacturers specifications.

Power Consumption: 3 watts (All outputs enabled)

Voltage Drop (without fuse): 60mV (Typical)

Alarm Form “C” Contact: Form “C” Dry Contacts
1A/60VDC Max

Alarm Sensor Inputs: External dry contact alarm inputs, configurable for NO or NC logic.
Applied voltage 3.3V, 0.4mA for contact closure detection.

Ethernet: RJ45, 10Base–T/100Base–T

SNMP: SMNPv1/v2c/v3

Input Connector: Heavy Duty Insulated M10 Stud
75in–lbs Max

Output Connector: Barrier Terminal Block
M4 Screws
8 – 20AWG Wire Range
12in–lbs Max

Alarm Connectors: Euro Terminal Block
M2 Screws
16 – 28AWG Wire Range
1in–lbs Max

Operating Temperature: –4°F to 140°F
–20°C to +60°C

Dimensions: 19.0” x 9.29” x 1.75”
483mm x 236mm x 45mm

Weight: 8.0lbs (3.6kg)

Warranty: 2 years

LIMITED WARRANTY

ICT Limited Warranty is only intended for the benefit of the original Purchaser of this product. This Warranty is not transferable or assignable without the prior written permission of ICT. ICT's sole obligation and liability under this warranty is limited to either repairing or replacing defective products at the sole discretion of ICT. When repairing or replacing the products, ICT may use products or parts that are new, equivalent to new or re-conditioned. Parts repaired or replaced during the warranty period will be under warranty for the remainder of the warranty period.

The warranty period on ICT products purchased new from ICT is two years. The warranty period for a repaired product or part thereof is ninety (90) days or the remainder of the unexpired term of the new product warranty period, whichever is greater. Repair or replacement of a defective product or part does not extend the original warranty coverage period.

No claim will be accepted unless written notice of the claim is received by ICT in accordance with ICT's Return Material Authorization (RMA) procedure, as soon as reasonably possible after the defect is discovered. A valid product serial number must be provided with the RMA claim to prove eligibility. The RMA form is available on the ICT website at www.ict-power.com/support/warranty-repair/.

The Purchaser shall at their own risk and cost return the defective product to ICT's factory or designated repair center once an RMA is issued by ICT. Return of the products to the customer after repair is completed shall be prepaid by ICT unless otherwise mutually agreed between the parties. Products shipped to ICT which have incurred freight damage will not be covered by this Warranty and any repairs or replacement parts, components or products needed will be invoiced in the full current price amount and returned freight collect to Purchaser. It is the Purchaser's responsibility to check the product upon receipt for any damage during shipping and to contact the carrier or shipper regarding such damage. Product that is returned as defective, which is determined to operate within published specifications will be returned to the Purchaser freight collect.

This Warranty will be void if the product has been subjected to misuse, neglect, accident, exposure to environmental conditions not conforming to the products' limits of operation, improper installation or maintenance, improper use of an electrical source, defects caused by sharp items or by impact pressure, a force majeure event, has been modified or repaired by anyone other than ICT or its authorized representative, has been subjected to unreasonable physical, thermal or electrical stress, improper maintenance, or causes external to the unit including but not limited to general environmental conditions such as rust, corrosive atmospheres, sustained temperatures outside the specified operating range of the equipment, exposure to power surges and/or electrical surges, improper grounding, mould or dust, animal or insect damage, water damage or immersion in liquid of any kind.

ICT does not control the installation and use of any ICT product. Accordingly, it is understood this does not constitute a warranty of performance or a warranty of fitness for a particular purpose.

INNOVATIVE CIRCUIT TECHNOLOGY LTD.
26921 GLOUCESTER WAY LANGLEY, BRITISH COLUMBIA, CANADA V4W 3Y3
T 604.856.6303 F 604.856.6365 www.ict-power.com



The Power of Reliability